


1 RAIN JACKET APPLICATION STEP BY STEP

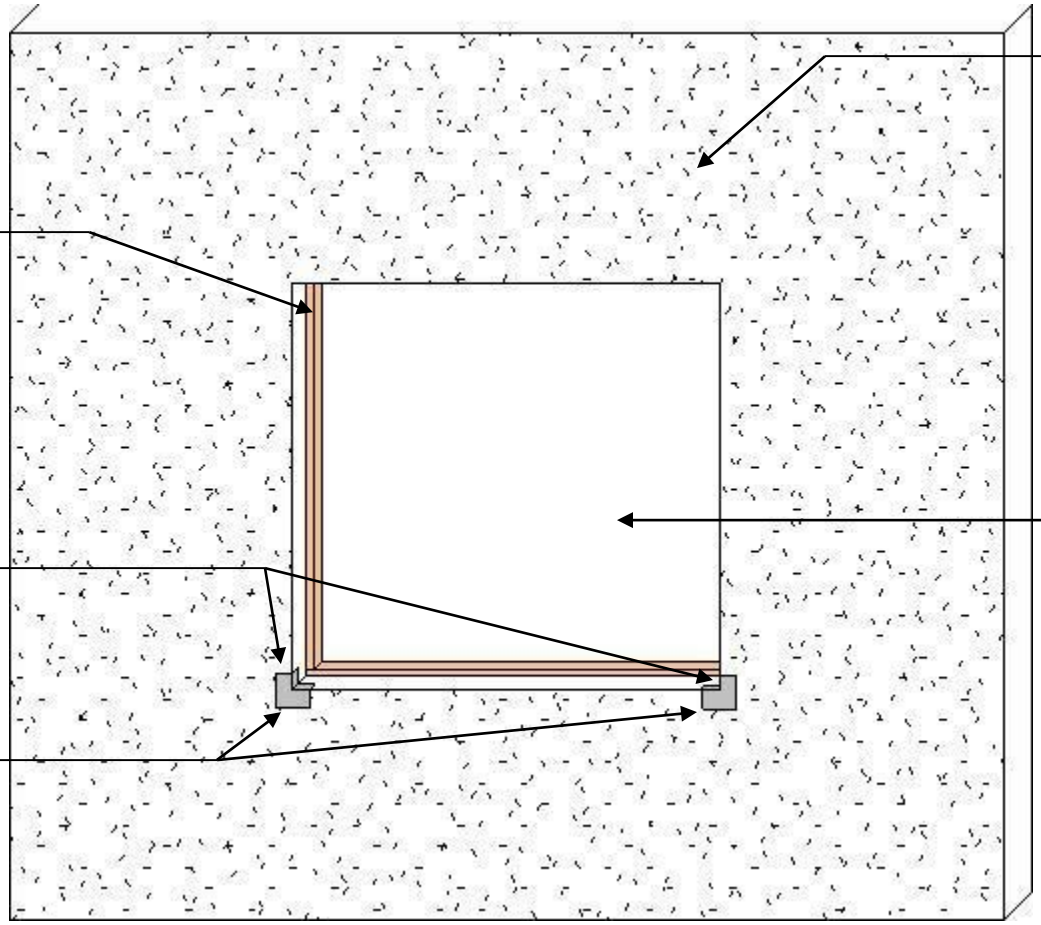

2 RAIN JACKET APPLICATION STEP BY STEP

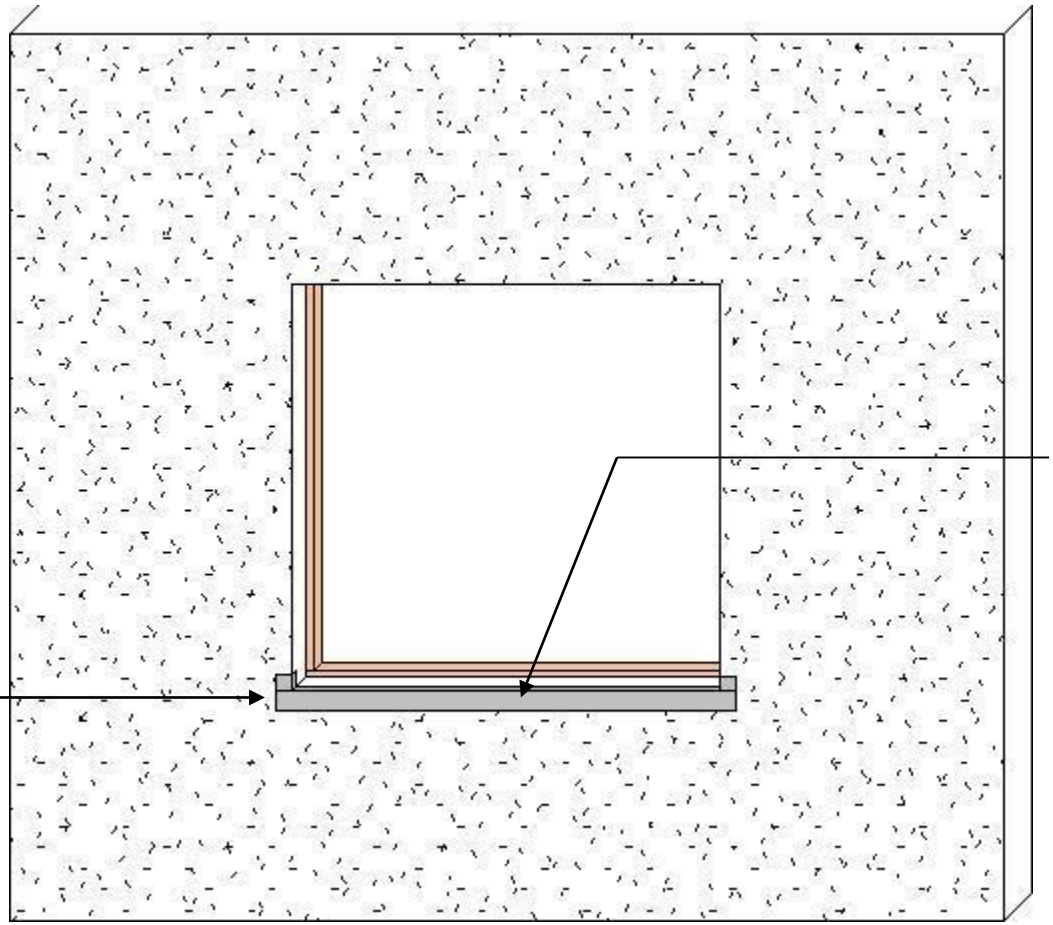

3 RAIN JACKET APPLICATION STEP BY STEP

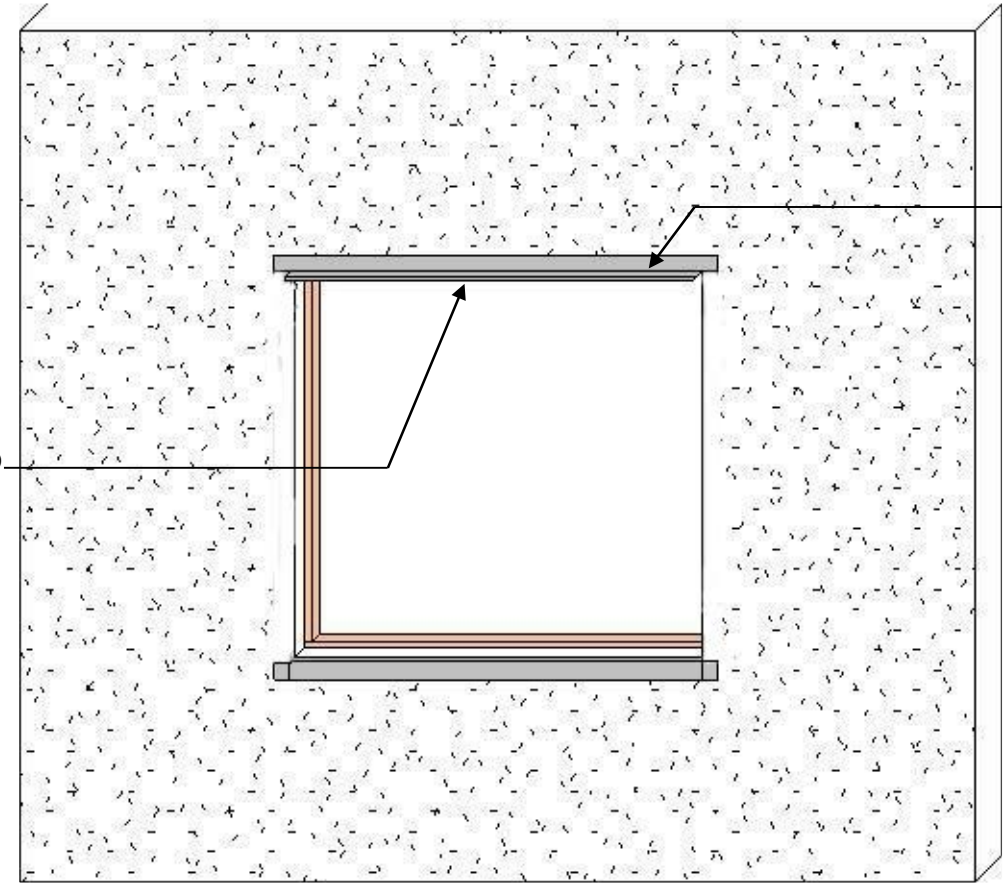


RAIN JACKET RIGID HEAD FLASHING CUT AND INSTALLED AGAINST EXISTING SHEATHING

OSI® QUAD® MAX APPLIED AS BEDDING SEALANT TO RAIN JACKET RIGID HEAD FLASHING


4 RAIN JACKET APPLICATION STEP BY STEP

OSI® QUAD® MAX APPLIED AS BEDDING SEALANT TO RAIN JACKET® RIGID JAMB FLASHING

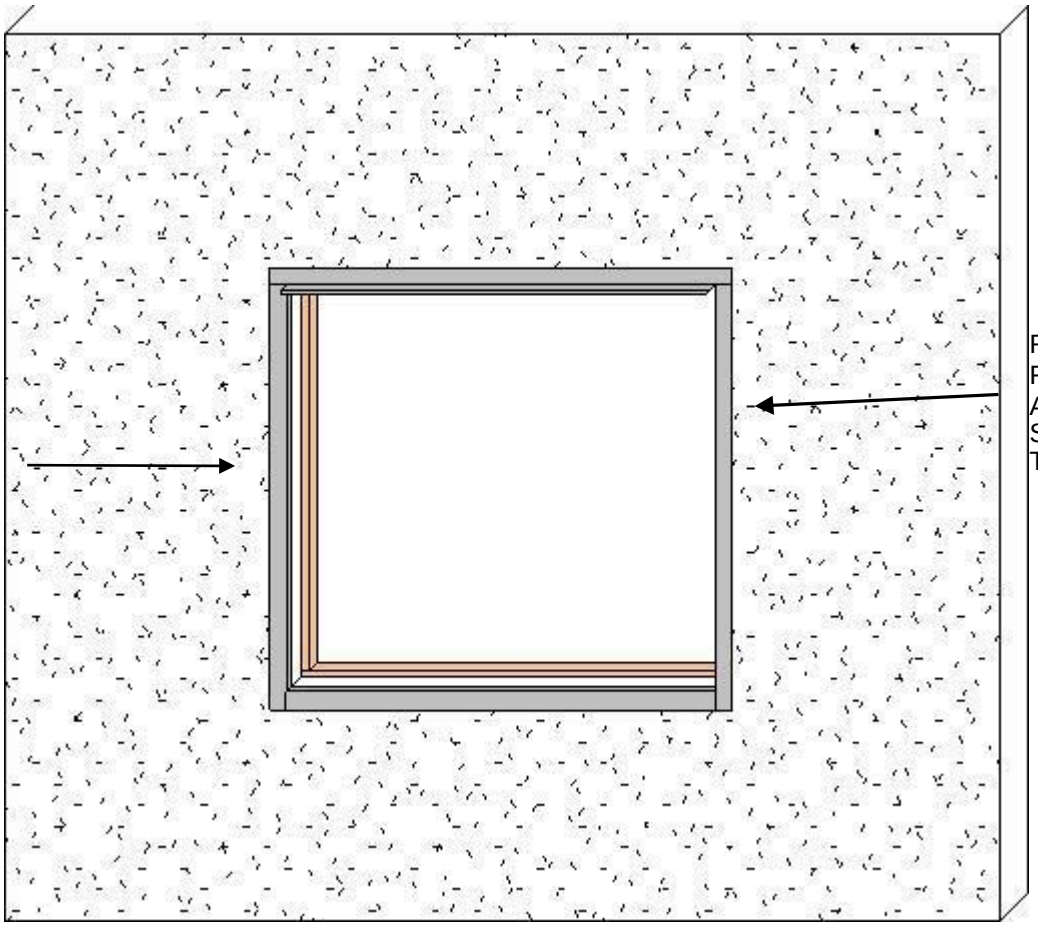

RAIN JACKET RIGID JAMB FLASHING CUT AND INSTALLED AGAINST EXISTING SHEATHING AND INTO THE HEAD FLASHING RECEIVER


5 RAIN JACKET APPLICATION STEP BY STEP

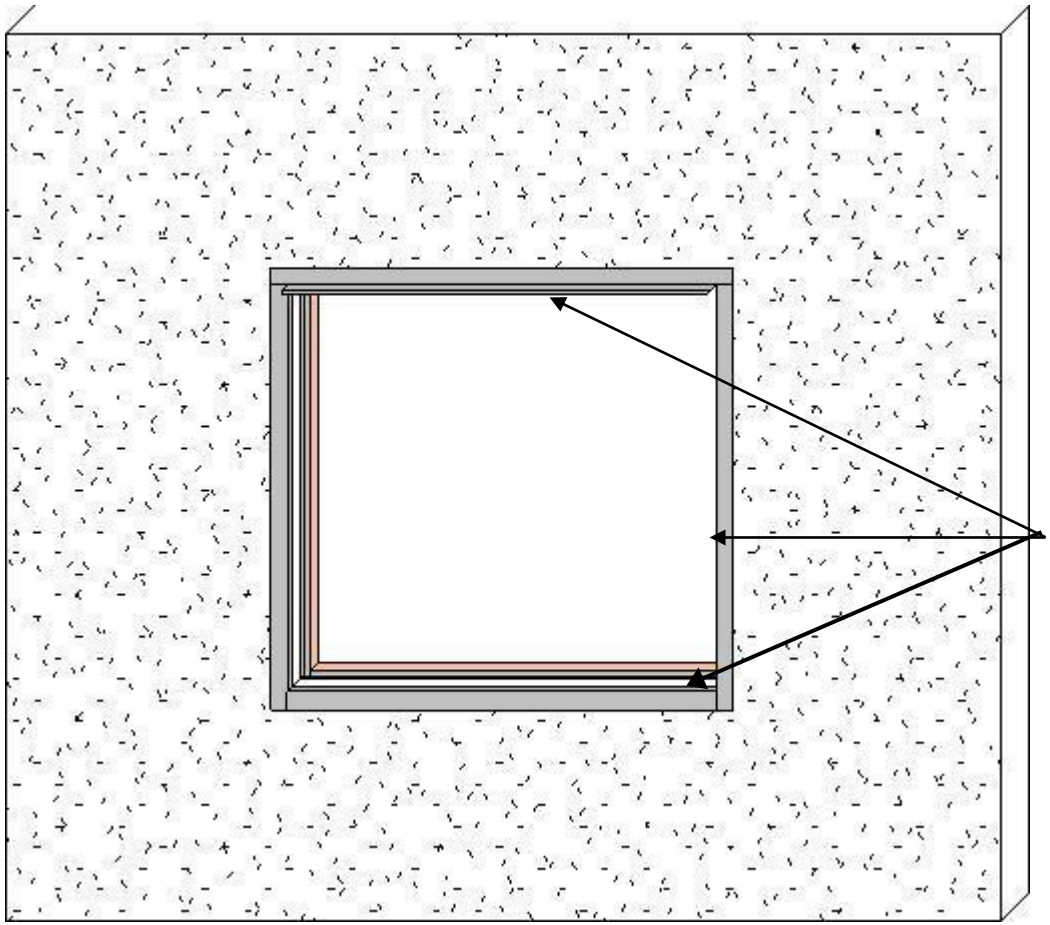

RAIN JACKET INTERIOR “L” FLASHING APPLIED AGAINST INTERIOR LINERS AT SILL JAMBS AND HEAD


6 RAIN JACKET APPLICATION STEP BY STEP

APPLY MICROSEALANT OVER EXTERIOR AND INTERIOR RIGID FLASHINGS.

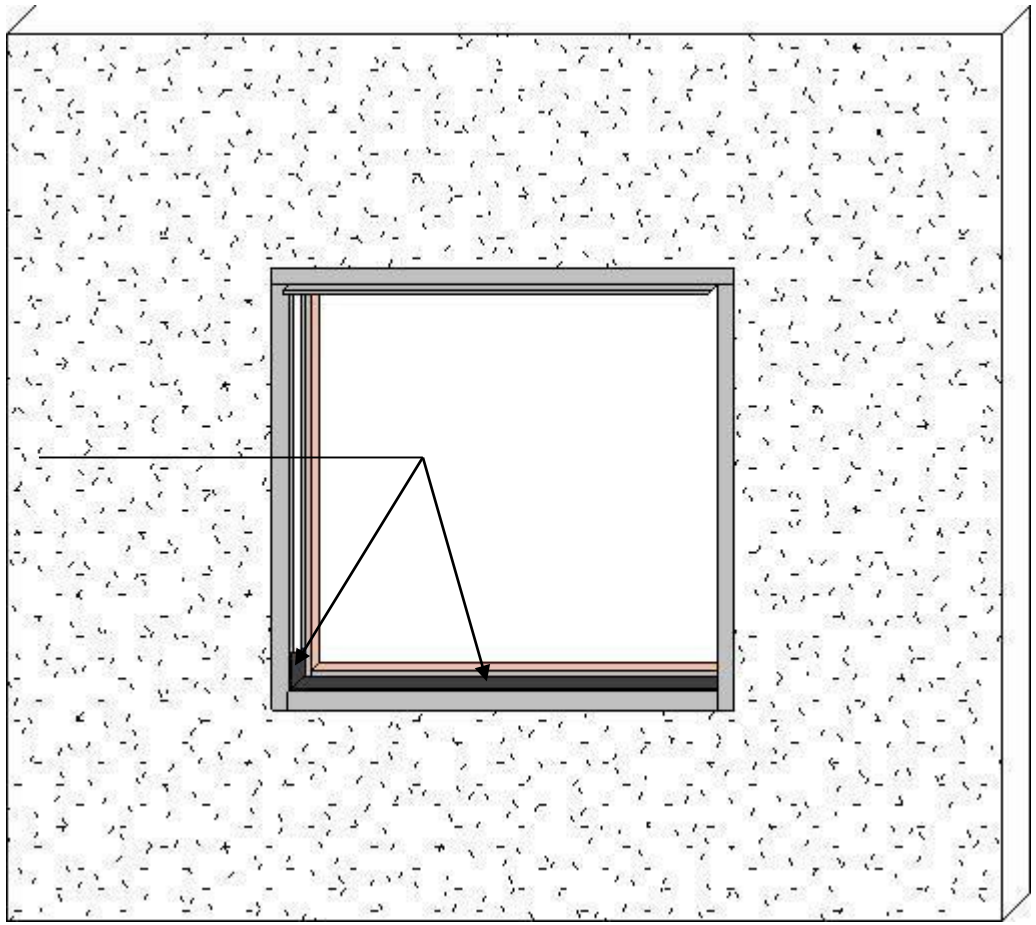

7 RAIN JACKET APPLICATION STEP BY STEP


OSI® QUAD® MAX APPLIED
AS LUBRICANT TO
RAIN JACKET INTERIOR
L ANGLE

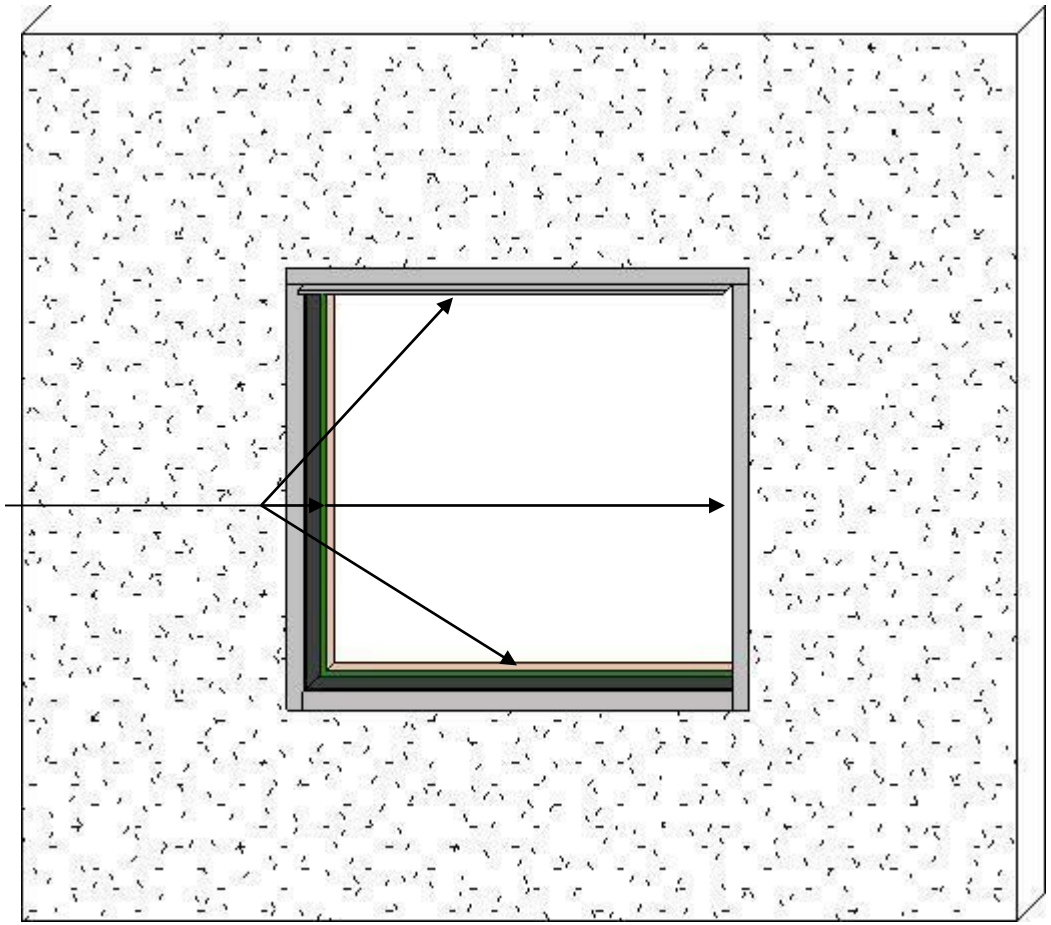

8 RAIN JACKET APPLICATION STEP BY STEP

APPLY WINDOW TO FLASHING ASSEMBLY

LEVEL, PLUMB, SQUARE AND FASTEN WINDOW TO OPENING

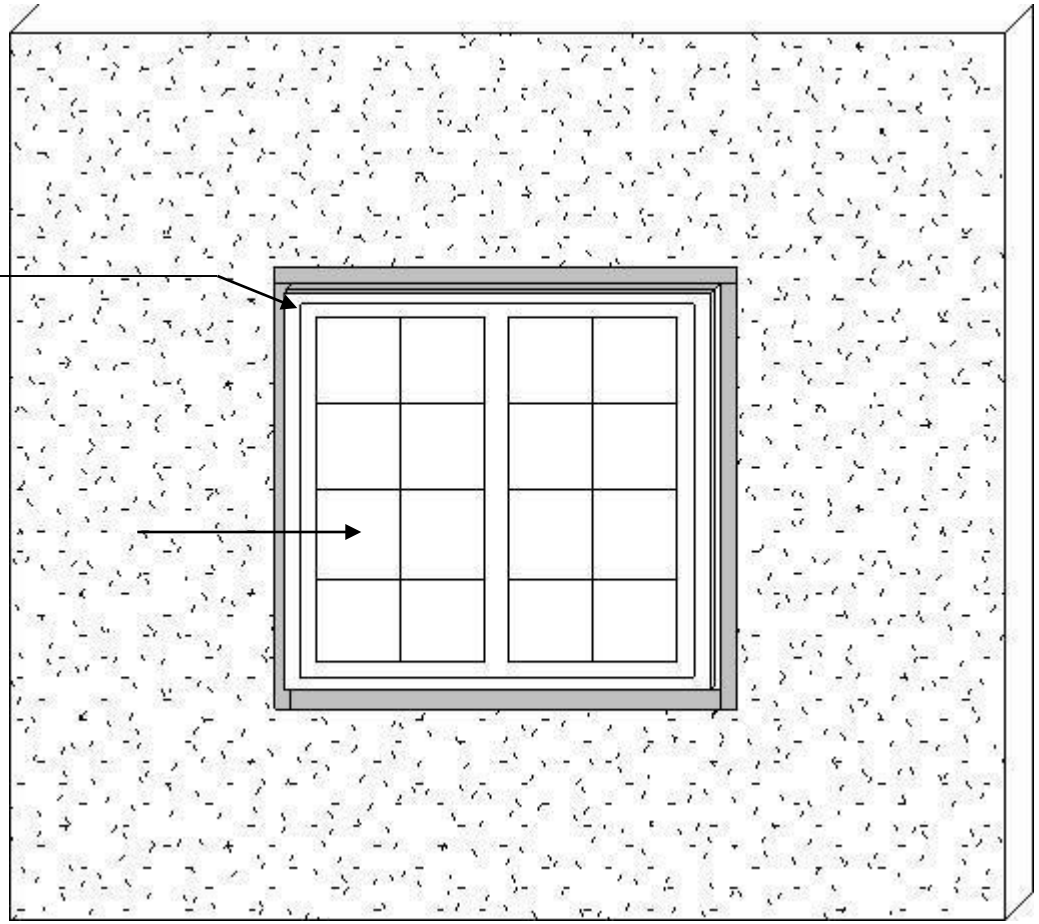

9 RAIN JACKET APPLICATION STEP BY STEP

